HOW TO MEASURE CELLULAR SHADES

Inside Mount

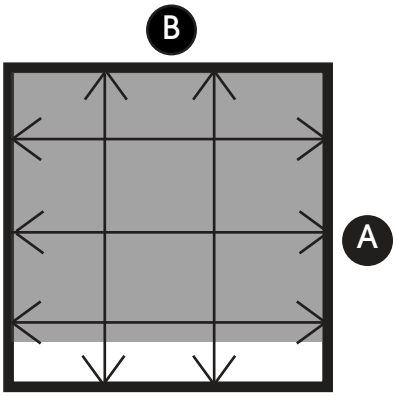

Features:
- Ceiling-mounted
- Creates a clean, seamless look
- Ideal for showcasing window frames
- Creates a slight gap a the sides

Requirements:
- Minimum of 4cm window depth
- Minimum of 8cm window depth needed for flush mount (within the window frame)

Step 1:
Measure the inner width of the window at the top, middle and bottom, excluding the window frame. A Choose the smallest measurement and deduct 1cm for the blind width to order.

Step 2:
Measure the inner height of the window at the left middle and right side, excluding the window frame. B Choose the largest measurement as the blind height to order.

Outside Mount

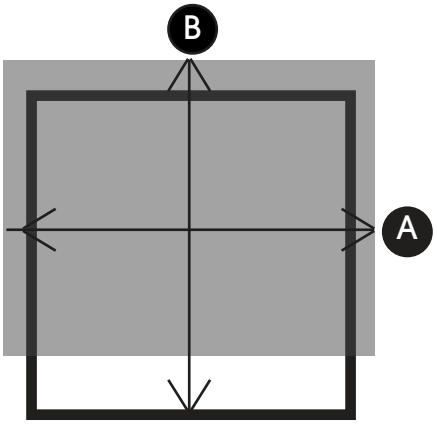

Features:
- Wall-mounted
- Suitable for any type of window
- Provides greater light blockage
- Makes a window look bigger
- Hides unsightly window frames or grilles

Requirements:
- Ensure window grilles or window handles do not obstruct the blind

Step 1:
Measure the width of the window including the window frame. A If there is space at the sides of the window frame, add 8cm to the measurement for for the blind width to order.

Step 2:
Measure the height of the window including the window frame. B If there is space at the bottom of the window frame, add 10-20cm to the measurement for for the blind height to order.